

ELITE COMPONENT COVERAGE GUIDE

- EXTENDED PROTECTION PLAN
- CERTIFIED PRE-OWNED & WRAP
- CERTIFIED SELECT & WRAP



I N F I N I T I

ELITE[®]
PROTECTION
PROGRAM

UP TO 2,080
REASONS TO
FEEL SECURE



EXPANDED MECHANICAL COVERAGE BEYOND YOUR LIMITED WARRANTY

COVERAGE SO EXTENSIVE, ONLY A FEW ITEMS ARE NOT COVERED: The Elite Extended Protection Plan offers exclusionary coverage, the highest level of coverage that a vehicle qualifies for once it is outside the manufacturer's warranty. Virtually all major components of your vehicle are covered,¹ providing you with an unprecedented level of mechanical protection after your factory warranty expires.


CERTIFIED PRE-OWNED & CERTIFIED SELECT VEHICLE buyers can upgrade their vehicle's protection by adding an Elite CPO/Select Wrap plan.

Guard Against the Rising Cost of Repairs

The Elite Protection Plan offers comprehensive extended mechanical coverage with up to 2,080 components covered and terms extending out to 8 years and 120,000 miles. Coverage so extensive, only a few items/systems are not covered.¹

INFINITI CPO/Certified Select vehicle buyers can add 2 and 3 years respectively to their limited warranty, including our Complete Travel Protection, plus match the Elite VSC exclusionary mechanical coverage with an Elite Wrap upgrade. Lock in today's parts & service prices and ensure your INFINITI receives service you can trust with Elite Protection.

Total Component Coverage Comparison

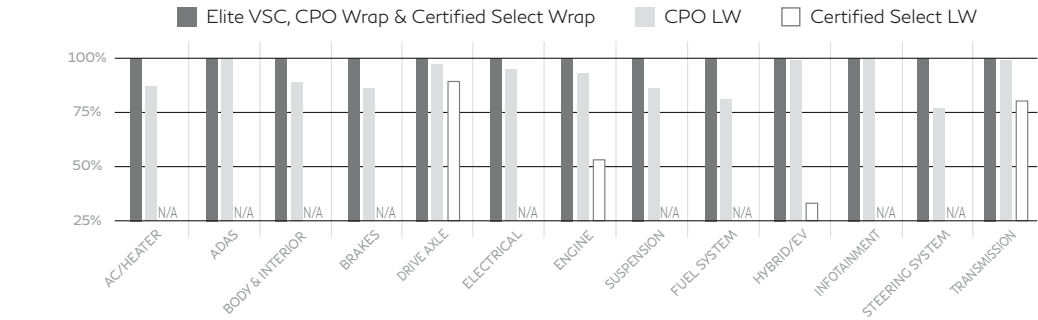

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
AC/HEATER			
BRACKET - COMPRESSOR	11910	■	■
BELT - COMPRESSOR	11920	■	■
A/C COMP IDLER PULLEY	11924	■	■
BRACKET - IDLER PULLEY	11926	■	■
SUNLOAD SENSOR	21710	■	■
SENSOR GRILLE	21712	■	■
AIR PURIFIER SENSOR	22367	■	■
REAR HEATER RELAY	25207	■	■
RELAY - BLOWER MOTOR	25208	■	■
VACUUM HOSE	25214	■	■
RELAY - AIR CONDITIONER	25218	■	■
RELAY-REAR AIR CONDITIONER	25225	■	■
FAN CONTROL AMPLIFIER	25246	■	■
RELAY - MAX COLD DOOR	25257	■	■
REAR - HEATER RELAY	25274	■	■
REAR HEATER CONTROL FRONT	25307	■	■
RELAY-PTC HEATER	25707	■	■
UNIT - HEATER	27000	■	■
REAR HEATER CORE	27013	■	■
REAR HEATER MOTOR	27014	■	■
CONTROL - AIR COND.	27030	■	■
VALVE ASSY - VACUUM SELECTOR	27031	■	■
CONTROL ASSY - AUTO AIR CONDITIONER	27032	■	■
REAR HEATER UNIT	27035	■	■
A/C HARNESS	27038	■	■
SWITCH ASSY - FAN	27041	■	■
CASE - BLOWER	27065	■	■
FAN & MOTOR	27070	■	■
HEATER CONNECTOR	27071	■	■
HEATER SWITCH REGISTER	27077	■	■
ACTUATOR - VACUUM	27080	■	■
ASPIRATOR	27084	■	■
VACUUM WATER COCK	27090	■	■
IN-VEHICLE SENSOR	27096	■	■
HEATER CORE	27115	■	■
HEATER COCK	27116	■	■
GAS SENSOR ASSY	27118	■	■
CABLE - AIR COND. CONTROL	27134	■	■
MODE DOOR ACTUATOR	27141	■	■
DUCT - ASPIRATOR	27143	■	■
WATER TEMP SENSOR	27150	■	■
DUCT - CENTER DEFROSTER	27151	■	■
SIDE DEFROSTER DUCT	27152	■	■
DEFROSTER HOSE	27164	■	■
NOZZLE - FLOOR	27167	■	■
DUCT - HEATER	27173	■	■
REAR A/C DUCTING COMPONENTS	27175	■	■
REAR HEATER RESISTOR	27178	■	■
HOSE - HEATER	27181	■	■
HEATER TUBE	27185	■	■
THERMISTOR	27222	■	■
THERMO CONTROL AMPLIFIER	27330	■	■
BLOWER MOTOR ASSY	27375	■	■
BLOWER IMPELLER	27383	■	■
REAR COOLING UNIT	27405	■	■

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
REAR EVAPORATOR ASSY	27410	■	■
RR A/C-HIGH TUBE	27413	■	■
RR A/C-LOW TUBE	27414	■	■
REAR COOLER CASE ASSY	27415	■	■
BI-LEVEL MOTOR ACTUATOR	27427	■	■
FEEDBACK RESISTOR (PBR)	27433	■	■
AIR MIX DOOR ACTUATOR	27452	■	■
AIR PURIFIER CASE	27461	■	■
AIR PURIFIER ASSY	27492	■	■
FRESH AIR VENT SWITCH ASSY	27513	■	■
HOSE - DRAIN	27619	■	■
EVAPORATOR ASSY	27621	■	■
SWITCH-HIGH PRESSURE	27623	■	■
VALVE - EXPANSION	27625	■	■
COMPRESSOR ASSY	27630	■	■
AMPLIFIER - BLOWER CONTROL	27631	■	■
DOUBLE SOLENOID VACUUM VALVE	27635	■	■
RECEIVER/DRYER	27640	■	■
SWITCH - LOW PRESSURE	27648	■	■
CONDENSER	27650	■	■
MOTOR - CONDENSER FAN	27651	■	■
FAST IDLE DIAPHRAGM	27655	■	■
MAGNETIC CLUTCH	27659	■	■
SNAP RING	27660	■	■
REAR A/C FAN SWITCH ASSY	27665	■	■
DUCT - SIDE VENTILATOR	27670	■	■
ACTUATOR- VENTILATOR DOOR UPPER	27671	■	■
PIPE COOLER	27677	■	■
CONNECTOR - JOINT	27680	■	■
ACTUATOR-DEFROSTER DOOR	27685	■	■
ACTUATOR-DRIVER SIDE, AIR MIX DOOR	27700	■	■
ACTUATOR-DRIVER SIDE, INTAKE DOOR	27701	■	■
ASPIRATOR FAN	27703	■	■
AMBIENT SENSOR	27704	■	■
SENSOR - SOLAR	27705	■	■
SENSOR-AMBIENT AIR TEMP	27706	■	■
AUTO TEMP CNTRL UNIT	27708	■	■
SNRS-REFRIG. TEMP COMPRESSOR DISCH.	27710	■	■
VACUUM CONTROL HOSE	27711	■	■
SENSOR-AIR TEMP, PTC HEATER OUTLET	27712	■	■
AMPLIFIER - FAN CONTROL	27717	■	■
SENSOR - INTAKE	27723	■	■
ASPIRATOR	27726	■	■
SENSOR - IN-VEHICLE	27727	■	■
ASPIRATOR DUCT	27728	■	■
SEAL - A/C COMPRESSOR SHAFT	27730	■	■
SWITCH - COOLANT TEMPERATURE	27732	■	■
SUNLOAD SENSOR AMPLIFIER	27738	■	■
ACTUATOR ASSY-AIR MIX DOOR	27740	■	■
SHIFT ACTUATOR VALVE	27741	■	■
MAGNETIC CLUTCH ASSY	27742	■	■
RING - SNAP	27744	■	■
SOLENOID VALVE SET	27746	■	■
DEFROSTER DOOR ACTUATOR	27747	■	■
L/H-SIDE AIR MIX DORR ACTUATOR	27748	■	■
TRANSISTOR-POWER	27750	■	■
ASPIRATOR FAN	27752	■	■

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
SENSOR ASSY - AMBIENT	27755	■	■
AMBIENT AIR TEMP SENSOR	27757	■	■
MAGNETIC CLUTCH AMPLIFIER	27762	■	■
SEAL-CONDENSER SIDE	27763	■	■
VALVE-EXPANSION	27764	■	■
SUPER HEAT SWITCH	27765	■	■
THERMAL PROTECTOR	27770	■	■
HEATER DUCT	27830	■	■
REAR FLOOR HEATER DUCT	27832	■	■
CENTER DUCT	27850	■	■
VENTILATOR - CENTER	27860	■	■
VENT DOOR/DUCT	27923	■	■
FLOOR REAR HEAT/AC DUCT-FRONT PIECE	27930	■	■
FLOOR REAR HEAT/AC DUCT-REAR PIECE	27931	■	■
REAR FLOOR HEATER DUCT	27932	■	■
AIR PURIFIER GRILLE ASSY	27945	■	■
DUCT - HEATER REAR	27950	■	■
AMBIENCE UNIT	27972	■	■
AUTO AIR CONTROL AMPLIFIER	28520	■	■
ACCELERATION CUT TIMER	28525	■	■
PTC HEATER HARNESS CONNECTR	29511	■	■
SUPER HEAT TIMER	92184	■	■
VALVE-EXPANSION	92200	■	■
HOSE ASSY HEATER	92310	■	■
REAR WASHER TUBE	92316	■	■
REAR HEATER HOSE	92330	■	■
REAR HEATER TUBE	92331	■	■
HOSE - HEATER, INLET	92400	■	■
HOSE - FRONT HEATER	92401	■	■
HOSE ASSY - REAR HEATER, INLET	92420	■	■
LOW PRESSURE FLEXIBLE HOSE	92441	■	■
EXCHANGER-HEAT	92446	■	■
PIPE - COOLER	92460	■	■
PIPE ASSY - REAR COOLER, HIGH C	92462	■	■
HIGH PRESSURE FLEXIBLE HOSE	92471	■	■
FLEXIBLE HOSE - LOW PRESSURE	92480	■	■
FLEXIBLE HOSE - HIGH PRESSURE	92490	■	■
COMPRESSOR RPM SENSOR	92855	■	■
ADAS			
ICC STEERING SWITCH	18932	■	■
CONTROL ASSY-INTELLIGENT CRUISE CTRL	18995	■	■
BUTTON-DRIVE ASSISTANCE	25103	■	■
DISTANCE WARNING SNRS SW	25125	■	■
SWITCH ASSY - BSW	25126	■	■
SWITCH-PARK,PRO-PILOT	25139	■	■
ICC BRAKE HOLD RELAY	25184	■	■
ICC STRNG SWITCH	25185	■	■
ICC BRAKE SWITCH	25186	■	■
AROUND VIEW MONITOR SWITCH	25308	■	■
SWITCH-STEERING WHEEL,PRO PILOT	25550	■	■
FRNT SONAR SENSOR BUZZER	25659	■	■
BUZZER-SONAR SENSOR	25660	■	■
SONAR ROAD SENSOR	25965	■	■
SWITCH-SENSOR OFF, PARKING (SONAR)	25988	■	■
SONAR SWITCH ASSY	25989	■	■
FRONT SONAR SENSOR NS	25993	■	■
FRONT CONER SONAR SENSOR	25994	■	■

¹ There are only a few items /systems that are not covered. Exclusions include but are not limited to items such as paint /body, interior trim, head lamp /tail lamp assemblies and vehicle maintenance. Components covered are subject to change. For complete information concerning components covered, and those components which are excluded from coverage, please refer to your contract or contact your INFINITI retailer.

ADAS CONTINUED			
Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
REAR SONAR SENSOR NS	25996	■	■
SENSOR-SONAR,FRONT SIDE	25998	■	■
SENSOR-SONAR,REAR SIDE	25999	■	■
BUZZER ASSY-LKS / LDW	26349	■	■
WARNING CHIME/BUZZER	26350	■	■
ICC WARNING CHIME	26353	■	■
BSW/BSI INDICATOR	26670	■	■
CONTROL ASSY-BACK VIEW	28262	■	■
RADAR - SIDE	28405	■	■
UNIT AVM CONTROL	28406	■	■
UNIT-CONTROL,HD MAP	28418	■	■
CAMERA ASSY-SIDE VIEW	28419	■	■
VEHICLE DATA TRANSMITTERASY	28420	■	■
CONTROL UNIT - ADAS2	28424	■	■
ADAS CONTROLLER	28427	■	■
BSW CONTROL ASSY	28428	■	■
CTRL.MODULE-BUZZER,DRIVER ASSISTANT	28429	■	■
SID OBSTACLE WARNING SENSOR	28430	■	■
SENSOR UNIT-INTRUDE	28436	■	■
SENSOR ASSY - DISTANCE ,ICC	28437	■	■
CAMERA ASSY-BACK VIEW	28442	■	■
CAMERA ASSY - LKS / LDW	28443	■	■
REAR SONAR SENSOR BRACKET	28452	■	■
CONTROL MODULE BSW	28456	■	■
CAMERA ASSY-FR VIEW	28461	■	■
SOLENOID VALVE ASSY-BACK VIEW CAMERA	28479	■	■
CONTROL ASSY-CAN GATEWAY	28481	■	■
SOLENOID VALVE ASSY-BACKVIEW CAMERA	28499	■	■
BUZZER-SONAR SENSOR , FRONT	28501	■	■
CONTROL UNIT-SONAR SENSOR	28532	■	■
TUBE ASSY-WASHER,REAR VIEW CAMERA	28975	■	■
AVM CAMERA FINISHER	73979	■	■
CAMERA CONTROLLER	28441	■	■
SIDE OBSTACLE WARNING SENSOR ASSY	28440	■	■

BODY & INTERIOR

SWITCH - ASCD SET/CANCEL	18930	■	■
SHUTTER ASSY,RADIATOR	21421	■	■
LOCK-LID,CHARGE PORT	23600	■	■
COMBINATION METER LENS	24813	■	■
CABLE - SPEEDOMETER	25050	■	■
LANE DEPARTURE SENSOR SWITCH	25134	■	■
SWITCH - HEAT UP	25144	■	■
VDC OFF SWITCH	25147	■	■
STEERING WHEEL HEATER SWITCH	25148	■	■
SWITCH ASSY-ECO MODE	25154	■	■
SWITCH ASSY - COMBINATION (LIGHTING)	25160	■	■
SWITCH-TRIP/RESET	25174	■	■
SWITCH ASSY - AIR CONTROL, SEAT	25175	■	■
PEDAL ADJ SWITCH ASSY	25180	■	■
HEADLAMP AIMING SWITCH	25188	■	■
BACK DOOR LOCK ACTUATOR	25189	■	■
SWITCH -SUN ROOF SLIDE	25191	■	■
RELAY - SUN ROOF	25192	■	■
RELAY- FUEL LID OPENER	25271	■	■
RR SEAT BACK RELEASE RELAY	25298	■	■
SWITCH -POWER SEAT	25310	■	■
SEAT SLIDE SWITCH	25314	■	■
HEATED SEAT RELAY	25325	■	■
SWITCH-CLOSURE, BACK DOOR	25386	■	■
SWITCH ASSY - FOLDING ROOF	25452	■	■
REAR POWER SEAT SWITCH	25494	■	■
POWER FOLD SEAT SWITCH	25502	■	■
SWITCH - REMOTE CONTROL MIRROR	25570	■	■
HEATED MIRROR SWITCH	25580	■	■
SWITCH - 3RD SEAT RECLINING	25945	■	■
BLOWER MOTOR COVER	27220	■	■
MOTOR-LIFT,3RD ROW	27381	■	■
CONT UNIT - CLOSURE	27573	■	■
DCM CONTROL UNIT	28340	■	■
CAMERA ASSY-MIRROR,SMART ROOM	28445	■	■
REAR VIEW CONTROL ASSY	28462	■	■
SENSOR-LIFT,3RD ROW	28477	■	■
CONTROL UNIT - FOLDING ROOF	28521	■	■
CONT UNIT - CLOSURE, TRUNK LID	28563	■	■
CONTROL UNIT-2ND SEAT	28568	■	■
BRKT-DISCONNECT SW	29706	■	■
CABLE - KEY INTERLOCK	34908	■	■
RELEASE CABLE	36329	■	■
TRUNK LID INSIDE RELEASE HANDLE	36400	■	■
SPRING - CLUTCH PEDAL RETURN	46586	■	■
ACTIVE GRILLE SHUTTER	62304	■	■
HINGE ASSY - HOOD	65400	■	■
HOOD HINGE TORSION BAR	65420	■	■
HOOD STAY	65470	■	■
MALE ASSY - HOOD LOCK	65601	■	■
CABLE - HOOD LOCK CONTROL	65620	■	■
SECONDARY HOOD LOCK CONTROL ASSY	65670	■	■
BASE-CHARGE PORT	65712	■	■
ASSIST AIR BAG LID	68290	■	■

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
LOCK SET - GLOVE BOX LID	68630	■	■
FRAME - SUN ROOF	73640	■	■
RAIL-GUIDE	73662	■	■
BRACKET - SUN ROOF MOTOR	73670	■	■
DEFLECTOR - AIR, SUN ROOF	73675	■	■
MOTOR - SUN ROOF	73685	■	■
DRAIN HOSE	73876	■	■
LISTING - WIRE	73921	■	■
CLAMP/BELT - SPARE TIRE	74630	■	■
SWITCH - FUEL FILLER LID OPENER	78826	■	■
FUEL LID OPENER ACTUATOR	78852	■	■
REAR WINDOW REGULATOR MOTOR	79701	■	■
FINISHER - REAR PARCEL SHELF, SIDE RH	79910	■	■
FINISHER - REAR PARCEL SHELF, SIDE LH	79911	■	■
FINISHER-REAR PARCEL SHELF SIDE	79912	■	■
LINKAGE P SHELF	79914	■	■
MOTOR P SHELF	79915	■	■
HINGE ASSY - FRONT DOOR	80400	■	■
LINK DOOR - STOPPER	80430	■	■
LOCK ASSY - DOOR	80502	■	■
ROD ASSY - REMOTE CONTROL	80512	■	■
STRIKER ASSY - DOOR LOCK	80570	■	■
CYLINDER ASSY - DOOR LOCK	80600	■	■
REGULATOR ASSY - FRONT DOOR	80700	■	■
HOOK-SUNSHADE	82245	■	■
PARTITION WINDOW SHADE ASSY	82275	■	■
HINGE ASSY - REAR DOOR	82400	■	■
LOCK ASSY - REAR DOOR	82502	■	■
STRIKER ASSY - DOOR LOCK	82570	■	■
BACK DOOR OPEN/CLOSE MOTOR	82580	■	■
REGULATOR ASSY - DOOR WINDOW	82700	■	■
LOCK ASSY - FUEL FILLER LID	84360	■	■
LATCH SUBFRAME	84376	■	■
CENTERING HINGE	84410	■	■
STRIKER - BACK DOOR LOCK	84420	■	■
PARCEL SHELF TRUNK OPEN LEVER	84442	■	■
CABLE - FUEL FILLER/TRUNK LID OPENER	84450	■	■
CYLINDER - TRUNK LID/TAIL GATE	84460	■	■
SOLENOID/MOTOR - TRUNK LID OPENER	84471	■	■
HINGE ASSY - TRUNK LID/BACK DOOR	84510	■	■
STAY SET, TENSION BAR - TRUNK LID	84532	■	■
SWITCH - TRUNK LLD OPENER CANCEL	84665	■	■
ACTUATOR - Q45 TRUNK LID OPENER	84680	■	■
SWITCH SENSOR	84991	■	■
SEAT AIR CONTROL SWITCH	87016	■	■
FAN MOTOR ASSY	87305	■	■
FAN MOTOR CONTROL UNIT	87306	■	■
POWER FOLD CONTROL UNIT	87316	■	■
SENSOR-FRONT SEAT OCCUPANT	87333	■	■
BLOWER ASSY - FRONT SEAT	87334	■	■
LIFT DEVICE ASSY	87400	■	■
DEVICE ASSY - RECLINING	87401	■	■
POWER SEAT RECLINER DRIVE CABLE	87403	■	■
BOLT - SPECIAL	87408	■	■
SLIDE ASSY	87501	■	■
FRONT LEFT SEAT SLIDE ASSY/BRACKET	87502	■	■
POWER SEAT DRIVE CABLE	87503	■	■
SWITCH LIMIT FR SEAT	87504	■	■
POWER LUMBAR SUPPORT SEAT ASSY	87641	■	■
SLIDE - ASSY	87653	■	■
LIFT ASSY	87654	■	■
ELECTRIC RECLINING DEVICE ASSY	87655	■	■
HARNESS ASSY - REAR SEAT	88019	■	■
UNIT ASSY-HEATER, REAR SEAT CUSHION	88335	■	■
SWITCH WALK IN SEAT BACK SIDE	88406	■	■
REAR RECLINING DEVICE ASSY	88451	■	■
REAR POWER SEAT MOTOR	88510	■	■
REAR POWER SEAT SLIDE	88551	■	■
RELEASE HANDLE ASSY-R SEAT CUSHION	88552	■	■
UNIT ASSY - HEATER, REAR SEAT BACK	88635	■	■
CABLE-SLIDE,3RD SEAT	89604	■	■
BRACKET-BACK DOOR STAY	90459	■	■
ACTUATOR-TAIL GATE OPENER	90551	■	■
POWER BACK DOOR DRIVE ASSY	90560	■	■
MOTOR ASSY - LOCK	91295	■	■
SUNROOF RAIL ASSEMBLY	91350	■	■
REAR BODY HEAT INSULATOR	93828	■	■
STRIKER LATCH SUBFRAME FR	94377	■	■
MIRROR - REMOTE CONTROL	96302	■	■
MIRROR ASSY - INSIDE	96321	■	■
MIRROR ASSY-SMART ROOM	96323	■	■
ACTUATOR ASSY - MIRROR	96367	■	■
POWER FOLDING MIRROR ACTUATOR	96370	■	■
VISOR - SUN	96400	■	■
HOME LINK VISOR - SUN	96401	■	■
INDICATOR - A/T CONTROL LEVER	96940	■	■
RELEASE HANDLE-CONSOLE,REAR	96957	■	■
LINKAGE ASSY - FOLDING ROOF	97006	■	■
REAR LATCH ASSY	97051	■	■
MAIN DRIVE CYLINDER	97060	■	■

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
TRUNK LID CYLINDER	97062	■	■
HOSE - MAIN DRIVE CYLINDER	97063	■	■
HOSE PAIR TRUNK LID CYLINDER	97064	■	■
HOSE PAIR LATCH CYLINDER	97065	■	■
CASIN - HYDRAULIC PUMP	97068	■	■
LATCH ASSY - RHT SIDE	97080	■	■
HYDRAULIC PUMP	97091	■	■
LOCK ASSY - FOLDING ROOF	97095	■	■
LATCH CYLINDER	97098	■	■
SPRING CLIP TRUNK LID CYLINDER	97099	■	■
CYLINDER ROOF LOCK	97102	■	■
BOWDEN CABLE	97138	■	■
TUBE DRAIN	97168	■	■
SHADE ASSY-REAR SIDE WINDOW	97513	■	■
REAR WNDW SHADE GEAR/MOTOR ASSY	97581	■	■
AUTO DRIVE POSITION CONTROL	98800	■	■
REAR VIEW CAMERA KT	AA158	■	■

BRAKES

BRACKET -REAR MOTOR MOUNT,LH	11356	■	■
RELAY-STOP LAMP	23171	■	■
BOOST/VACUUM SENSOR	25085	■	■
IBA SWITCH	25122	■	■
SWITCH-BRAKE OFF,EMERGENCY	25124	■	■
TCS SWITCH ASSY	25145	■	■
ABS MOTOR RELAY	25187	■	■
VDC/TCS/ABS RELAY BOX	25285	■	■
VDC/TCS/ABS CONTROL ASSY	25286	■	■
SWITCH - STOP LAMP	25320	■	■
SENSOR-LOW BRAKE PRESSURE	31960	■	■
CONTROL ASSY - HAND BRAKE	36010	■	■
SWITCH - PARKING BRAKE	36011	■	■
PARKING BRAKE DAMPER	36055	■	■
ROD - RELEASE	36327	■	■
SPRING - HAND BRAKE LEVER	36337	■	■
ROD/CABLE - HAND BRAKE/FRONT	36402	■	■
NUT - HAND BRAKE CABLE ADJUST	36437	■	■
ROD - CROSS CABLE	36451	■	■
ROD - REAR CABLE	36452	■	■
EQUALIZER	36518	■	■
SPRING - RETURN	36545	■	■
ADJUSTER - REAR CABLE	36547	■	■
NUT - WHEEL	40224	■	■
TIRE PRESSURE SENSOR SEAL	40702	■	■
TIRE PRESSURE ANTENNA	40740	■	■
YOKE - CALIPER	41025	■	■
PIN - HOLD DOWN	41040	■	■
PIN - PIVOT	41041	■	■
SPRING - ANTI-SQUEAL	41083	■	■
CLIP - ANTI-RATTLE	41086	■	■
CALIPER ASSY - FRONT	41110	■	■
PISTON & SEAL	41120	■	■
PLATE - FRONT BAFFLE	41151	■	■
CALIPER ASSY - REAR	44010	■	■
BACK PLATE	44020	■	■
BODY - CALIPER	44025	■	■
PIN - HOLD DOWN	44040	■	■
EXTENSION LINK	44075	■	■
PIN - ANTI-RATTLE	44081	■	■
SPRING - PAD	44082	■	■
SPRING - RETURN, REAR BRAKE	44090	■	■
LEVER ASSY - TOGGLE	44095	■	■
WHEEL CYLINDER ASSY	44100	■	■
TOGGLE LEVER	44118	■	■
PISTON & SEAL	44120	■	■
PLATE - BAFFLE	44151	■	■
PARKING BRAKE ANCHOR	44180	■	■
ADJUSTER ASSY	44200	■	■
CYLINDER ASSY - BRAKE MASTER	46010	■	■
CYLINDER-SIMULATOR, BRAKE STROKE	46011	■	■
ELECTRIC UNIT-ABS ACTUATOR	46012	■	■
CAP - RESERVOIR	46020	■	■
SEAL - RESERVOIR TANK	46045	■	■
INDICATOR ASSY - LEVEL	46048	■	■
PISTON ASSY	46063	■	■
RING - SNAP	46082	■	■
TANK - OIL RESERVOLR	46090	■	■
STRAINER - OIL	46093	■	■
RESERVOIR HOSE	46113	■	■
PIN - CLEVIS	46123	■	■
FRONT BRAKE HOSE	46201	■	■
REAR BRAKE HOSE	46211	■	■
PIPE - BRAKE	46284	■	■
CONNECTOR	46313	■	■
NP VALVE (LOAD SENSING VALVE)	46400	■	■
PROPORTIONING VALVE	46401	■	■
AUTO ADJUSTING BRAKE PEDAL	46501	■	■
STOPPER ASSY - PEDAL	46518	■	■
PEDAL - BRAKE	46520	■	■
BUSHING - BRAKE PEDAL	46525	■	■
SHAFT - BRAKE FULCRUM	46560	■	■

BRAKES CONTINUED

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
SLEEVE - PEDAL SHAFT	46580	■	■
SPRING - BRAKE PEDAL RETURN	46585	■	■
BRAKE BOOSTER ASSY	47210	■	■
SPACER - BRAKE BOOSTER	47211	■	■
CONTROL ASSY-BOOSTER	47213	■	■
ABS ACCUMULATOR	47215	■	■
BRAKE PRESSURE SENSOR ASSY	47230	■	■
HOSE - BRAKE BOOSTER	47471	■	■
CONNECTOR - BRAKE BOOSTER	47475	■	■
VALVE ASSY - CHECK	47478	■	■
ACTUATOR ASSY	47600	■	■
ABS ACTUATOR RELAY	47605	■	■
ACTUATOR BRACKET	47840	■	■
MODULE ASSY	47850	■	■
ABS/TCS CONTROL UNIT ASSY	47851	■	■
BRAKE CAPACITOR	47880	■	■
CAPACITOR ASSY	47881	■	■
SENSOR ASSY (RR) - ANTI-SKID	47900	■	■
SENSOR ASSY (FR) - ANTI-SKID	47910	■	■
SENSOR - BRAKE STROKE	47920	■	■
DECELERATION SENSOR ASSY	47930	■	■
STEERING ANGLE SENSOR ASSY	47945	■	■
ROTOR ASSY (RR) - SENSOR	47950	■	■
BRACKET - FRONT SENSOR	47960	■	■
ROTOR ASSY (FR) - SENSOR	47970	■	■
TUBE & HOSE ASSY - RR ACTR, RH	52503	■	■
TUBE & HOSE ASSY - RR ACTR, LH	52504	■	■
TUBE & HOSE ASSY - RR ACTR, FR-A	52505	■	■
TUBE & HOSE ASSY - RR ACTR, FR-B	52506	■	■
TUBE & HOSE ASSY - RR ACTR, RR-A	52507	■	■
TUBE & HOSE ASSY - RR ACTR, RR-B	52508	■	■
TUBE & HOSE ASSY - HYD SUSP, FR FLOOR	52641	■	■
TUBE & HOSE ASSY-HYD SUSP,FR FLOOR-LH	52642	■	■
ABS MODULE - SHOCK, FRONT	56100	■	■
ABS MODULE - SHOCK, REAR	56200	■	■

DRIVE AXLE (FWD/RWD/AWD)

DIFFERENTIAL LOCK UNIT	28496	■	■
HOSE ASSY-BRTHR	31098	■	■
YOKE SLEEVE DUST COVER	32135	■	■
SHAFT - PROPELLER	37000	■	■
CENTER BEARING BRACKET	37010	■	■
JOURNAL ASSY	37125	■	■
BRACKET - CENTER BEARING	37511	■	■
BRACKET - CENTER BEARING	37519	■	■
BEARING - CENTER	37520	■	■
BEARING - CENTER	37521	■	■
INSULATOR - CENTER BEARING	37522	■	■
HEAT BRACKET/SHIELD-PROPELLER SHAFT	37530	■	■
HYPOID GEAR & PINION SET	38100	■	■
BOLT - DRIVE GEAR	38102	■	■
BEARING - PINION REAR	38120	■	■
BEARING - PINION FRONT	38140	■	■
SHAFT ASSY - REAR AXLE	38162	■	■
NUT - REAR AXLE SHAFT LOCK	38163	■	■
SPACER - PINION BEARING	38165	■	■
SPACER - PINION PILOT BEARING	38169	■	■
SEAL - OIL, DRIVE PINION	38189	■	■
FLANGE - COMPANION	38210	■	■
FLANGE - SIDE	38220	■	■
FLANGE - 4WD SIDE	38221	■	■
DIFFERENTIAL SIDE SHAFT ASSY	38230	■	■
EXTENSION TUBE RETAINER	38232	■	■
FINAL DRIVE ASSY	38300	■	■
HOUSING - FINAL DRIVE	38310	■	■
CARRIER - 4WD GEAR	38311	■	■
GASKET - REAR COVER	38320	■	■
BREATHER - AIR, TRANSFER	38322	■	■
BREATHER	38323	■	■
BEARING - PILOT	38335	■	■
SEAL-OIL,LH SIDE	38336	■	■
SEAL-OIL,RH SIDE	38337	■	■
RETAINER - 4WD SIDE BEARING	38341	■	■
SEAL - OIL, SIDE	38342	■	■
SEAL - OIL - 4WD DIFF. SIDE	38344	■	■
O-RING - 4WD SIDE RETAINER	38345	■	■
AXLE TUBE O-RING SEAL	38346	■	■
SIDE O-RING SEAL	38347	■	■
SEAL-OIL ELECTRIC COUPLING	38348	■	■
COVER - REAR FINAL DRIVE	38351	■	■
BREATHER & HOSE - DIFFERENTIAL	38352	■	■
BREATHER - 4WD	38353	■	■
BREATHER HOSE	38354	■	■
DRAIN PLUG	38355	■	■
CVT BREATHER HOSE	38356	■	■
REAR COVER GASKET	38420	■	■
CASE - DIFF.	38421	■	■
GEAR - SIDE, DIFF. BEVEL	38423	■	■
WASHER - THRUST, SIDE GEAR	38424	■	■
PINION MATE - DIFF. BEVEL	38425	■	■
WASHER - THRUST, PINION MATE	38426	■	■
SHAFT - PINION MATE	38427	■	■

ELECTRICAL CONTINUED			
Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
FUSE BLOCK	25410	■	■
FUSIBLE LINK BOX	25411	■	■
FRT. POWER SEAT SWITCH ASSY	25490	■	■
SEAT MEMORY SWITCH	25491	■	■
SEAT MEMORY CANCEL SWITCH	25492	■	■
SWITCH - SEAT HEATER	25500	■	■
UNIT - HEADLAMP SENSOR	25505	■	■
TAIL LAMP SENSOR UNIT	25506	■	■
TURN SIGNAL FLASHER UNIT	25520	■	■
HAZARD FLASHER UNIT	25521	■	■
METER POWER UNIT	25522	■	■
SWITCH - HEADLAMP/TURN SIGNAL	25540	■	■
CABLE - SPIRAL	25554	■	■
CONTROL UNIT - AIR BAG	25555	■	■
SIGNAL RECEIVER SWITCH	25556	■	■
FRONT WIPER/WASHER SWITCH	25560	■	■
VOICE WARNING SWITCH	25591	■	■
THEFT WARNING HORN ASSY	25605	■	■
BUZZER ASSEMBLY	25641	■	■
SWITCH - GLOVE BOX	25720	■	■
SWITCH - POWER WINDOW	25750	■	■
SWITCH - POWER WINDOW SUB	25752	■	■
SWITCH - HAZARD	25880	■	■
SPEED SENSOR	25911	■	■
CARD-SD	25920	■	■
DOOR HANDLE SWITCH	25974	■	■
BACK-DOOR CONTROL UNIT	25990	■	■
RR CORNER SONAR SENSOR NS	25995	■	■
HEADLAMP CONTROL ASSY	26055	■	■
DOOR MIRROR TURN SIGNAL ASSY	26165	■	■
HORN	26310	■	■
DIGITAL TOUCH BUZZER	26352	■	■
ARM - WIPER	26380	■	■
RR SIDE WINDOW SWITCH	26430	■	■
HARNES - COMBINATION LAMP	26551	■	■
CLOCK	27380	■	■
TUBE - TEE	27416	■	■
NOZZLE - WASHER	27440	■	■
TUBE ASSY - WASHER	27460	■	■
REAR WASHER TUBE COMPLETE	27470	■	■
TANK - WASHER	27480	■	■
REAR WASHER TANK	27490	■	■
WASHER TANK LEVEL SENSOR	27491	■	■
CABLE - ANTENNA FEEDER	27531	■	■
TRUNK OPENER CANCEL SWITCH	27662	■	■
SENSOR-OPTICAL	27715	■	■
MOUNTING HARDWARE	27901	■	■
SMART ENTRANCE DOOR LOCK SWITCH	28242	■	■
BODY SONIC CONTROLLER	28251	■	■
FES CONTROL PANEL	28259	■	■
AMBIENCE SWITCH	28261	■	■
REAR DISPLAY FINISHER	28286	■	■
RR COMP LAMP MONITOR ASSY	28312	■	■
REAR DEFOGGER CONDENSER	28357	■	■
BODY SONIC HARNES	28378	■	■
CONTROL ASSY-USB DC CHARGER	28386	■	■
ACTIVATOR (A.S.C.D.)	28400	■	■
CONTROLLER (A.S.C.D.)	28402	■	■
SWITCH - MAIN (A.S.C.D.)	28404	■	■
POWER WINDOW AMPLIFIER	28410	■	■
HEADLAMP BATT SAVER CONTROL UNIT	28414	■	■
IPDM/USM MODULE	28417	■	■
CORNERING LAMP UNIT	28421	■	■
SENSOR- STOP/TAIL LAMP	28426	■	■
OIL LEVEL TIMER	28432	■	■
TIMER - DOOR LOCK	28450	■	■
REAR WINDOW DEFROSTER TIMER	28455	■	■
MUFFLER CONTROL UNIT ASSY	28488	■	■
BODY CONTROL MODULE	28492	■	■
POWER STEERING CONTROL UNIT	28500	■	■
RELAY - WIPER	28510	■	■
REVERSE LAMP RELAY	28511	■	■
RELAY BRACKET	28512	■	■
AMPLIFIER ASSY-AUTO POWER WINDOW	28516	■	■
CARD SLOT CONTROL ASSY	28535	■	■
RAIN SENSOR	28536	■	■
CONTROL UNIT-DR MIRROR TURN SIGNAL	28548	■	■
TIME CONTROL UNIT	28550	■	■
SENSOR & DIAGNOSTIC UNIT	28558	■	■
POWER DISTRIBUTION UNIT	28560	■	■
POWER SEAT CONTROL UNIT	28565	■	■
AUTO DRIVE-POS CONTROL UNIT	28567	■	■
LIGHTING CONTROL	28575	■	■
DAYTIME RUNNING LAMP CONTROL	28576	■	■
LIGHTING SENSOR	28578	■	■
CONTROLLER - THEFT WARNING	28591	■	■
CONTROLLER - SUB THEFT WARNING	28592	■	■
RELAY - THEFT WARNING	28593	■	■
SMART ENTRANCE CONTROL UNIT	28594	■	■
DIGITAL TOUCH CONTROL UNIT	28595	■	■
KEYLESS ENTRY CONTROL ASSY	28597	■	■
REMOTE DOOR LOCK CONTROL UNIT	28600	■	■
VEHICLE IMMOBILIZER CONTROL UNIT	28601	■	■

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
VEHICLE IMMOBILIZER WIRING HAR.ASSY	28604	■	■
VEHICLE IMMOBILIZER ANTENNA ASSY	28607	■	■
REAR WIPER MOTOR	28710	■	■
MOTOR - WASHER	28765	■	■
REAR WASHER MOTOR	28766	■	■
MOTOR - WIPER	28810	■	■
INTERMITTENT WIPER AMPLIFIER	28820	■	■
ARM - WIPER MOTOR	28840	■	■
ROD - WIPER CONNECTING	28860	■	■
PIVOT ASSY	28870	■	■
WASHER TANK INLET NS	28916	■	■
SENSOR - A.S.C.D. SPEED	28940	■	■
SENSOR ASSY-BATTERY	29502	■	■
UNIT-SHIFT BY WIRE	31039	■	■
GAUGE-OIL LEVEL	31086	■	■
TIRE PRESSURE SENSOR	40700	■	■
TIRE PRESSURE SENSOR CONTROL UNIT	40720	■	■
TIRE PRESSURE ANT FRONT	40741	■	■
TIRE PRESSURE ANT REAR	40742	■	■
HARNES-PARKING BRAKE,ELEC	44250	■	■
IGNITION KEY LAMP ASSY	48476	■	■
IGNITION SWITCH ASSY	48750	■	■
RADIATOR GRILLE SHUTTER	62330	■	■
SWITCH - HOOD	65630	■	■
REAR WINDOW ANTENNA	79723	■	■
ACTUATOR - DOOR LOCK	80550	■	■
OUTSIDE DOOR HANDLE	80605	■	■
DOOR HANDLE SWITCH	80607	■	■
MOTOR - FRONT WINDOW REGULATOR	80730	■	■
SENSOR-CLUTCH TRAVEL	82006	■	■
MOTOR - REAR REGULATOR	82730	■	■
AIR BAG PRESSURE DETECT MODULE	86509	■	■
MOTOR ASSY-SLIDE	86911	■	■
FRONT POWER SEAT HARNES	87019	■	■
SIDE AIR BAG HARNES	87020	■	■
SEAT HEATER ELEMENT/THERMOSTAT	87345	■	■
SLIDE, LIFT SWITCH	87352	■	■
BACK DOOR OPENER ACTUATOR	90550	■	■
BACK DOOR CLOSURE MOTOR	90554	■	■
TRUNK/BACK DOOR INTELL KEY SWITCH	90605	■	■
ASCD VACUUM TANK	92260	■	■
PUMP - VACUUM A.S.C.D.	92270	■	■
ASCD VACUUM TANK	92660	■	■
DOOR MIRROR CONTROL UNIT	96312	■	■
ASSIST AIR BAG MODULE	98515	■	■
MODULE - AIR BAG	98520	■	■
CURTAIN AIR BAG MODULE	98521	■	■
SENSOR - AIR BAG	98581	■	■
PEDAL POSITION CONTROL UNIT	98700	■	■
SIDE AIR BAG MODULE	98830	■	■
SIDE AIR BAG SIDE SENSOR	98831	■	■
MODULE ASSY-SIDE AIR BAG RR	98832	■	■
MODULE ASSY-CENTER AIR BAG,FRONT	98833	■	■
AIR BAG ON/OFF SWITCH ASSY	98840	■	■
AIR BAG ON/OFF SWITCH HARNES	98841	■	■
SEAT BELT CONTROL UNIT ASSY	98845	■	■
HARNES-SEAT	98854	■	■
ENGINE			
ENGINE - BARE¹	10102	■	■
SHORT ENGINE ASSY¹	10103	■	■
BLOCK - CYLINDER	11010	■	■
CYLINDER BLOCK WELCH PLUG	11021	■	■
PLUG GASKET	11026	■	■
INSULATOR-INTAKE PORT	11040	■	■
HEAD ASSY - CYLINDER	11041	■	■
GASKET - CYLINDER HEAD	11044	■	■
COVER - CYLINDER HEAD FRONT/REAR	11046	■	■
CYLINDER HEAD WELCH PLUG	11051	■	■
BOLT - CYLINDER HEAD	11056	■	■
OUTLET - WATER	11060	■	■
HOUSING - THERMOSTAT	11061	■	■
WATER OUTLET GASKET	11062	■	■
CYLINDER BLOCK WATER OUTLET	11063	■	■
GASKET - THERMOSTAT HOUSING	11072	■	■
SPARK PLUG TUBE	11095	■	■
SEAT - INTAKE VALVE	11098	■	■
SEAT - EXHAUST VALVE	11099	■	■
PAN - OIL	11110	■	■
OIL CATCH PLATE	11112	■	■
COVER - OIL PAN BOTTOM	11115	■	■
GASKET - OIL PAN	11121	■	■
PLUG - OIL PAN DRAIN	11128	■	■
GAUGE - OIL LEVEL	11140	■	■
RH ENG MOUNT INSULATOR	11175	■	■
INSULATOR-REAR MOTOR MOUNT,RH	11176	■	■
INSULATOR-REAR MOTOR MOUNT,FRONT	11211	■	■
LH ENG MOUNT INSULATOR	11215	■	■
INSULATOR-REAR MOTOR MOUNT,LH	11216	■	■
INSULATOR - ENGINE MOUNT,FRONT	11220	■	■
RH ENG MOUNT BRACKET	11229	■	■
BRACKET - ENGINE MOUNT,FRONT	11232	■	■
CENTER MEMBER	11240	■	■

Vehicle Components Covered	PNC	VSC & Wraps CPO LW	Cert Sel LW
ENGINE DAMPER ASSY	11246	■	■
GUSSET	11262	■	■
ENG MOUNT ACTUATOR ASSY	11273	■	■
MODULE-CONTROL,ENGINE MOUNT	11280	■	■
INSULATOR - ENGINE MOUNT, REAR	11320	■	■
BRACKET -REAR MOTOR MOUNT,RH	11336	■	■
BRACKET - ENGINE MOUNT, REAR	11340	■	■
ACTUATOR-TORQUE ROD	11353	■	■
LH ENG MOUNT BRACKET	11355	■	■
BUFFER	11390	■	■
ALTERNATOR BRACKET	11710	■	■
ALTERNATOR ADJUSTING BAR	11715	■	■
DRIVE BELT TENSIONER	11716	■	■
P/S PUMP BELT TENSIONER	11717	■	■
DRIVE BELT	11720	■	■
BELT - TIMING	11721	■	■
SERPENTINE BELT TENSIONER	11750	■	■
VALVE - PCV.	11810	■	■
VENTILATION HOSE	11828	■	■
SEPARATOR ASSY - BREATHER	11830	■	■
BLOW BY CONTROL VALVE	11831	■	■
SEPARATOR ASSY-OIL	11835	■	■
PULLEY - IDLER	11925	■	■
BRACKET - IDLER PULLEY (FOR P/STRG PUMP)	11935	■	■
BRACKET - OIL PUMP	11940	■	■
BAR - OIL PUMP ADJUSTING	11945	■	■
SERPENTINE BELT TENSIONER BRKT	11972	■	■
PISTON & PIN	12010	■	■
RING - PISTON	12033	■	■
ROD & CAP - CONNECTING	12100	■	■
BEARING - CONNECTING ROD	12111	■	■
PISTON OIL JET	12121	■	■
ACTUATOR ASSY-VCR	12130	■	■
HOLDER-VCR PIN	12144	■	■
PIN-VCR ACTUATOR	12145	■	■
CRANKSHAFT	12200	■	■
BEARING - MAIN	12207	■	■
SEAL - CRANKSHAFT OIL	12279	■	■
PULLEY - CRANKSHAFT	12303	■	■
BOLT - FIXING (CRANK PULLEY)	12309	■	■
FLYWHEEL ASSY	12310	■	■
FLYWHEEL RING GEAR	12312	■	■
BOLT - FIXING (FLYWHEEL)	12315	■	■
CONVERTER PILOT	12330	■	■
PLATE ASSY - DRIVE	12331	■	■
BALANCER UNIT	12416	■	■
CAMSHAFT	13001	■	■
FUEL PUMP CAM	13015	■	■
GEAR - CRANKSHAFT	13021	■	■
GEAR - CAMSHAFT	13024	■	■
VTC SPROCKET ASSY	13025	■	■
CHAIN - TIMING	13028	■	■
COVER - ENGINE FRONT	13035	■	■
VTC COVER ASSY	13041	■	■
SEAL - OIL, CRANKSHAFT FRONT/REAR	13042	■	■
SEAL - CAMSHAFT OIL	13043	■	■
GASKET - DUST COVER	13044	■	■
WL LADDER ASSY	13045	■	■
SEAL-VTC SPROKET	13046	■	■
INLET - WATER	13049	■	■
LIFTER GUIDE	13051	■	■
OIL PUMP CHAIN TENSIONER	13054	■	■
SIGNAL PLATE-EXHAUST CAMSHAFT	13064	■	■
SIGNAL PLATE-INTAKE CAMSHAFT	13065	■	■
TENSIONER - CHAIN	13070	■	■
BALANCER CHAIN TENSIONER	13071	■	■
SPRING ASSY-VT	13072	■	■
JET - TIMING CHAIN OIL	13081	■	■
GUIDE - CHAIN TENSIONER SIDE	13085	■	■
SENSOR-TRIGGER	13093	■	■
VALVE - INTAKE	13201	■	■
VALVE - EXHAUST	13202	■	■
VALVE - SPRING	13203	■	■
SEAT - VALVE SPRING	13205	■	■
SEAT - VALVE OIL	13207	■	■
RETAINER - VALVE SPRING	13209	■	■
GUIDE - VALVE	13212	■	■
SHIM - VALVE	13229	■	■
LIFTER - VALVE (OHV ENGINE ONLY)	13231	■	■
VALVE ROCKER PIVOT	13234	■	■
SHAFT - ROCKER	13252	■	■
VALVE ROCKER/SHAFT SPRING	13256	■	■
ARM - VALVE ROCKER	13257	■	■
COVER ASSY - VALVE ROCKER	13264	■	■
GASKET - VALVE ROCKER COVER	13270	■	■
SEAL-VALVE ROCKER COVER OIL	13276	■	■
TIMING CHAIN REAR COVER	13500	■	■
GASKET - FRONT/REAR COVER	13520	■	■
MANIFOLD - INTAKE	14001	■	■
MANIFOLD - EXHAUST	14004	■	■
CAP BOLT & STUD	14006	■	■
LOWER MANIFOLD COLLECTOR	14011	■	■
EXHAUST MANIFOLD CONNECTOR	14012	■	■

ENGINE CONTINUED				
Vehicle Components Covered	PNC	VSC & Wraps	CPO	LW
COLLECTOR - INTAKE MANIFOLD	14013	■	■	■
SUPPORT - INTAKE MANIFOLD	14018	■	■	■
LWR CLLCTR/SUPERCHARGER GSKT	14033	■	■	■
GASKET - MANIFOLD	14035	■	■	■
INTAKE ADAPTER	14040	■	■	■
WATER CONNECTOR	14054	■	■	■
WATER BY-PASS HOSE	14055	■	■	■
HOSE-EGR WATER	14058	■	■	■
TUBE-EGR WATER	14075	■	■	■
GASKET - COLLECTOR	14080	■	■	■
THROTTLE BODY WATER HOSE	14083	■	■	■
HOSE ASSY-WATER PUMP,EGR	14085	■	■	■
HOSE ASSY-INLET,EGR COOLER	14086	■	■	■
HOSE ASST-OUTLET,EGR COOLER	14087	■	■	■
EXHAUST MANIFOLD COVER	14091	■	■	■
HEAT SHROUD	14096	■	■	■
SUPERCHARGER ASSEMBLY	14110	■	■	■
PUMP ASSY - WATER, INTER COOLER COOLING	14407	■	■	■
TURBOCHARGER	14411	■	■	■
PT,CA-TURBOCHARGER GASKET	14415	■	■	■
ACTUATOR-ROTARY TURBINE VALVE	14416	■	■	■
LINKAGE-ROTARY TURBINE VALVE	14417	■	■	■
EXHAUST OUTLET	14440	■	■	■
EXHAUST OUTLET GASKET	14445	■	■	■
BRACKET-SUPPORT	14449	■	■	■
TUBE & HOSE - INLET	14460	■	■	■
GASKET - INLET TUBE	14465	■	■	■
RECIRCULATION VALVE	14483	■	■	■
VIAS CONTROL VALVE ASSY	14518	■	■	■
EGR VALVE SPACER	14717	■	■	■
SENSOR - EXHAUST GAS TEMP.	14730	■	■	■
VALVE - B.P.T.(BACK PRES. TRANSDUCER)	14741	■	■	■
EAI UNIT	14810	■	■	■
EAI PIPE	14823	■	■	■
AB VALVE	14835	■	■	■
AIR INDUCTION HOSE	14860	■	■	■
MANIFOLD CONNECTOR	14875	■	■	■
VALVE - "VACUUM CUT VALVE" BYPASS	14933	■	■	■
VALVE - EVAP,CANISTER VENT CONTROL	14935	■	■	■
SERVICE PORT - EVAP	14939	■	■	■
SOLENOID VALVE - CAMSHAFT	14948	■	■	■
CANISTER - CARBON	14950	■	■	■
VALVE - E.G.R. SOLENOID	14954	■	■	■
VALVE - A/V CONTROL SOLENOID	14956	■	■	■
VALVE - MAP/BARO SWITCH SOLENOID	14962	■	■	■
BOOST CNTRL SOLENOID VLVE	14969	■	■	■
PUMP ASSY - OIL	15010	■	■	■
GASKET - OIL PUMP	15025	■	■	■
OIL PUMP DRIVE SPINDLE	15040	■	■	■
CHAIN - OIL PUMP DRIVE	15041	■	■	■
BALANCE CHAIN	15042	■	■	■
GEAR - OIL PUMP CRANK	15043	■	■	■
STRAINER - OIL	15050	■	■	■
FRONT COVER O-RING	15066	■	■	■
GUIDE - OIL PUMP CHAIN	15073	■	■	■
GUIDE - LOWER OIL PUMP CHAIN	15074	■	■	■
VALVE-OIL CHECK	15130	■	■	■
REGULATOR-OIL PRESSURE	15131	■	■	■
VALVE - OIL PUMP REGULATOR	15132	■	■	■
VALVE-ENGINE OIL PUMP	15133	■	■	■
CONTROL SOLENOID-ENGINE OIL PRESSURE	15134	■	■	■
THERMOSTAT-LUBRICATING OIL	15135	■	■	■
REGULATOR-OIL TEMPERATURE	15136	■	■	■
TUBE - DIPSTICK	15155	■	■	■
OIL INLET TUBE	15192	■	■	■
CONNECTOR-OIL INLET TUBE	15194	■	■	■
OIL OUTLET TUBE & HOSE	15197	■	■	■
TURBO OIL FEED ADAPTER	15199	■	■	■
BRACKET - OIL FILTER	15238	■	■	■
GASKET - OIL FILTER BRACKET	15239	■	■	■
SHUTOFF VALVE-OIL SPRAY NOZZLE	15240	■	■	■
VALVE - UNIT RELIEF	15241	■	■	■
CAP - OIL FILLER	15255	■	■	■
VALVE - OIL FILTER REGULATOR	15300	■	■	■
TERMINAL - ACCELERATOR WIRE	16361	■	■	■
WIRE - THROTTLE (PUMP TO TERMINAL)	16362	■	■	■
COVER PLATE/GASKET	16420	■	■	■
CLEANER ASSY - AIR	16500	■	■	■
GASKET & AIR CLEANER INSULATOR	16523	■	■	■
DUCT ASSY-AIR DUCT SIDE	16554	■	■	■
FUEL INJECTOR NOZZLE	16600	■	■	■
INJECTOR - FUEL	16603	■	■	■
VALVE-FUEL PRESSURE RELIEF	16614	■	■	■
PUMP ASSY-HIGH PRESSURE, FUEL	16632	■	■	■
DIESEL INJECTION PUMP	16700	■	■	■
PULLEY ASSY - TENSION	16805	■	■	■
OIL TEMP SENSOR	16970	■	■	■
MODULE - FUEL PUMP CONTROL	17001	■	■	■
FUEL PUMP REPAIR KIT	17010	■	■	■
PUMP ASSY - ELECTRIC FUEL	17012	■	■	■
FUEL PUMP CHECK VALVE	17014	■	■	■
FUEL PUMP GASKET	17099	■	■	■
CHAMBER - THROTTLE, EFI/ECCS	17118	■	■	■

F/R SUSPENSION CONTINUED				
Vehicle Components Covered	PNC	VSC &Wraps CPO LW	Cert Sel LW	
LINK ASSY- FRONT SUSPENSION UPPER	54524	■	■	■
BRACKET - FRONT SUSPENSION UPPER	54527	■	■	■
LINK - TRANSVERSE LOWER	54529	■	■	■
UPPER LINK	54533	■	■	■
UPPER LINK SPINDLE	54536	■	■	■
EXTENSION - KNUCKLE STEERING	54590	■	■	■
STABILIZER - FRONT	54611	■	■	■
BRACKET & BUSHING	54614	■	■	■
BUSH.ASSY-STABILIZING CONNECT. ROD	54618	■	■	■
ROD - RR STABILIZER CONNECTING	54619	■	■	■
CONN ROD ASSY BRACKET ASSY	54650	■	■	■
BRACKET - LOWER LINK	55015	■	■	■
LINK ASSY - LOWER	55019	■	■	■
SPRING - LEAF/COIL	55020	■	■	■
UPPER LINK ASSY	55023	■	■	■
PARALLEL ROD	55024	■	■	■
BUSHING ASSY - SUSPENSION ARM	55045	■	■	■
LOWER LINK BUSHING & BOLT	55047	■	■	■
UPPER LINK BUSHING & BOLT	55048	■	■	■
SILENCER-SPRING	55090	■	■	■
RADIUS ROD LINK	55110	■	■	■
FRONT LOWER LINK ASSY	55111	■	■	■
REAR SUSPENSION UPPER ARM	55120	■	■	■
LINK ASSY- RR SUSPENSION UPPER, FRONT	55121	■	■	■
REAR SUSPENSION CONTROL ROD	55122	■	■	■
PANHARD ROD ASSY	55130	■	■	■
LINK ASSY- RR SUSPENSION UPPER, REAR	55131	■	■	■
BUSHING - PANHARD ROD	55135	■	■	■
BOLT - SUSPENSION ARM	55226	■	■	■
BUMPER - BOUND	55240	■	■	■
STRUT BOUND BUMPER	55241	■	■	■
LOWER LINK BRACKET	55252	■	■	■
UPPER LINK BRACKET	55270	■	■	■
REAR STRUT ASSY	55302	■	■	■
INSULATOR - MOUNTING	55320	■	■	■
MEMBER - REAR SUSPENSION	55401	■	■	■
REAR TOWER BAR ASSY	55412	■	■	■
REAR TOWER BAR BRACKET, R.H./L.H.	55416	■	■	■
REAR CROSS BAR ASSY	55422	■	■	■
STAY - RR SUSPENSION MEMBER	55451	■	■	■
INSULATOR ASSY - SUSP.MEMBER MTG.	55466	■	■	■
BRACKET ASSY - DIFFERENTIAL MOUNTING	55471	■	■	■
BRACKET - PARALLEL ROD	55480	■	■	■
DIFF MOUNTING INSULATORS	55484	■	■	■
DYNAMIC DAMPER ASSY	55490	■	■	■
BAR - REAR SUSPENSION	55495	■	■	■
REAR AXLE TORSION BEAM ASSY	55500	■	■	■
ARM ASSY - SUSPENSION	55501	■	■	■
PROTECTOR-REAR AXLE	55514	■	■	■
PARALLEL ROD BOLT	55524	■	■	■
REAR SUSPENSION ARM PROTECTOR	55527	■	■	■
STAY - SPRING SEAT	55545	■	■	■
BUSHING	55743	■	■	■
STABILIZER - REAR	56230	■	■	■
BUSHING - CONNECTING ROD	56231	■	■	■
BRACKET - RR STABILIZER	56233	■	■	■
REAR STABILIZER USHING	56235	■	■	■
BUSHING & MNTNG BRACKET STABILIZER	56243	■	■	■
G SENSOR ASSY	98805	■	■	■

FUEL SYSTEM

FUEL DAMPER ASSY	11300	■	■	■
HOSE - WATER	14056	■	■	■
TUBE - E.G.R.	14120	■	■	■
AIR INLET HOSE	14463	■	■	■
ACTUATO-SUPRCHGR BYPASS VALV	14480	■	■	■
INTERCOOLER	14496	■	■	■
WATER PIPE	14498	■	■	■
WATER INLET/OUTLET PIPE	14499	■	■	■
VALVE - E.G.R. CONTROL	14710	■	■	■
E.G.R. PASSAGE	14711	■	■	■
TUBE - VACUUM	14729	■	■	■
TUBE-EVAP CONTROL	14912	■	■	■
EC-BOOST CONTROL VALVE	14920	■	■	■
PURGE CONTROL VALVE	14930	■	■	■
EVAP CAN PRGE VOL CONT SOL VLV	14931	■	■	■
PURGE CONTROL SOLENOID	14932	■	■	■
EVAP PURGE RESONATOR	14934	■	■	■
DRAIN CUT VALVE ASSY	14936	■	■	■
ASSY-PURGE PUMP	14941	■	■	■
VAPOR CANISTER ASSY	14949	■	■	■
SCV SOLENOID VALVE	14951	■	■	■
VACUUM DELAY VALVE	14958	■	■	■
PURGE CUT VALVE	14963	■	■	■
SCV CONTROL VAC SOLENOID VALVE	14967	■	■	■
VIAS CONTROL SOLENOID VALVE ASSY	14968	■	■	■
VALVE ASSY-ADMISSION	16116	■	■	■
IAS UNIT	16250	■	■	■
PROTECTOR-FUEL RAIL-D-INJ HIGH PRESS	16265	■	■	■
FUEL STRAINER ASSY	16400	■	■	■
FUEL STRAINER UPPER COVER	16404	■	■	■
INJECTOR HOSE	16409	■	■	■

Vehicle Components Covered	PNC	VSC &Wraps CPO LW	Cert Sel LW	
FUEL RAIL CROSSOVER TUBE	16441	■	■	■
DUCT - HOT AIR	16530	■	■	■
AIR TEMPERATURE SENSOR	16580	■	■	■
RESONATOR	16585	■	■	■
COVER - EXHAUST MANIFOLD	16590	■	■	■
INSULATOR-FUEL PUMPHIGH PRESSURE	16634	■	■	■
FUEL PRESSURE SENSOR	16637	■	■	■
FUEL CONNECTOR	17103	■	■	■
TANK - FUEL	17201	■	■	■
HOSE/TUBE FUEL FILLER	17220	■	■	■
NECK FUEL FILLER	17222	■	■	■
CAP - FUEL FILLER	17251	■	■	■
FUEL HOSE PROTECTOR	17271	■	■	■
FUEL TANK FILTER	17275	■	■	■
FUEL TANK PROTECTOR	17285	■	■	■
HOSE - VENTILATION	17325	■	■	■
VALVE - FUEL CHECK	17330	■	■	■
VENTILATION HOSE	17333	■	■	■
VAPOR VENT HOSE	17337	■	■	■
BREATHER VALVE	17368	■	■	■
VACUUM CUT-OFF VALVE	17372	■	■	■
TUBE - FUEL OUTLET (TANK TO STRAINER)	17501	■	■	■
TUBE - AIR SUPPLIER	17508	■	■	■
TUBE - FUEL RETURN	17510	■	■	■
TUBE ASSY - FRONT FUEL	17520	■	■	■
HIGH PRESSURE FUEL TUBE ASSY	17522	■	■	■
PROTECTOR-FUEL RAIL	17524	■	■	■
RETURN HOSE	17551	■	■	■
FUEL OUTLET HOSE	17565	■	■	■
FUEL TUBE PROTECTOR	17576	■	■	■
AUTO-ADJUST ACCEL PEDAL	18002	■	■	■
ACTUATOR-ACCELERATOR PEDAL	18006	■	■	■
ARM - ACCELERATOR PEDAL	18010	■	■	■
BRACKET ASSY - ACCELERATOR PEDAL	18021	■	■	■
ACCELERATOR PEDAL	18110	■	■	■
WIRE - ACCELERATOR	18150	■	■	■
ACCELERATOR STOPPER COVER	18158	■	■	■
SPRING - RETURN	18215	■	■	■
EXHAUST MOUNTING ASSY	20713	■	■	■
WATER TEMPERATURE SWITCH	22120	■	■	■
HOSE - VACUUM	22321	■	■	■
VIASVALVE VACUUM TANK	22328	■	■	■
CHRG AIR OUTLET PRES SEN TEMP	22350	■	■	■
CHRG AIR CLR OUTLET SEN TEMP	22351	■	■	■
SWITCH - CANNISTER CTRL VACUUM CK	22360	■	■	■
BOOST SENSOR	22364	■	■	■
SENSOR ASSY - PRESSURE	22368	■	■	■
SENSOR ASSY-VACUUM	22369	■	■	■
FUEL TEMPERATURE SENSOR	22629	■	■	■
INTAKE AIR TEMP SENSOR	22631	■	■	■
SENSOR - TANK FUEL TEMPERATURE	22634	■	■	■
SENSOR-EXHAUST GAS TEMPERATURE	22640	■	■	■
FUEL DAMPER	22675	■	■	■
FUEL HOSE DAMPER ASSY	22676	■	■	■
VTC ASSY-ELECTRIC	23757	■	■	■
UNIT - FUEL LEVEL SENDING	25060	■	■	■
EVAP.CTRL SYSTEM PRESSURE SENSOR	25086	■	■	■
EX GAS SENSOR HOLD RELAY	25226	■	■	■
SENSOR TURBOCHARGER SPEED	59126	■	■	■
DUCT - FRESH AIR	62860	■	■	■
BASE ASSY-FUEL FILLER	78120	■	■	■
TUBE BOOST SENSOR	97195	■	■	■

HYBRID/EV¹

INVERTER O-RING	14457	■	■	■
R.AIR GUIDE ASSY-AIR CLR COOLING RADIATOR	21463	■	■	■
AIR GUIDE ASSY-SUB RADIATOR	21464	■	■	■
PIPE ASSY-CONVERTER INLET	21513	■	■	■
HOSE INVERTER OUTLET	21534	■	■	■
PIPE-PUMP INLET	21537	■	■	■
BRUSH-EARTH	23390	■	■	■
HYBRID VEH CNTRL (ECU)	23700	■	■	■
EV DRIVE MOTOR CONTROL MODULE	23740	■	■	■
BATTERY VENT TUBE	24413	■	■	■
AC INVERTER RELAY	25303	■	■	■
RELAY-OPENER,CHG PORT	25317	■	■	■
CHARGE PORT LID SWITCH	25318	■	■	■
CHARGE CONNECT LOCK MODE SWITCH	25319	■	■	■
INVERTER CONTROL ASSY	25333	■	■	■
INVERTER CONTROL UNIT	25334	■	■	■
ACTR ASSY - CHARGE PORT LOCK	25350	■	■	■
SWITCH- E-PEDAL	25406	■	■	■
UNIT-INVERTER	28313	■	■	■
TRACTION MOTOR ASSY	29000	■	■	■
WATER OUTLET	29005	■	■	■
WATER INLET	29006	■	■	■
BRUSH ASSY	29017	■	■	■
INVERTER SEAL	29020	■	■	■
INVERTER (PCU)	29100	■	■	■
INVERTER COMPL-POWER HEAD	29101	■	■	■
HOUSING ASSY-CONNECTOR	29110	■	■	■

Vehicle Components Covered	PNC	VSC &Wraps CPO LW	Cert Sel LW	
INVERTER ASSY	29111	■	■	■
HARNESS ASSY-HIGH VOLTAGE	29115	■	■	■
BOX ASSY-DC/DC	29201	■	■	■
POWER CONVERTER BOX ASSY	29202	■	■	■
CONVERTER ASSY	29210	■	■	■
COVER-PDM	29230	■	■	■
BATTERY CONTROLLER ASSY	29300	■	■	■
BATTERY CONTROL ASSY	29310	■	■	■
SENSOR ASSY - MAIN CURRENT	29400	■	■	■
JUNCTION NO2 BOX ASSY	29401	■	■	■
HARNESS-CELL VOLTAGE	29406	■	■	■
JUNCTION BOX ASSY	29410	■	■	■
SENSOR - CURRENT	29420	■	■	■
POWER HEAD BRACKET	29433	■	■	■
BATTERY COOLING FAN	29500	■	■	■
BUS BAR REAR MODULE	29501	■	■	■
BUS BAR LH MODULE	29505	■	■	■
BUS BAR MAIN RH MODULE	29506	■	■	■
HEATER RELAY	29508	■	■	■
HEATER STACK	29510	■	■	■
BATTERY COOLER	29512	■	■	■
BATTERY CONNECTOR BASE	29531	■	■	■
CHARGER ASSY-BATTERY	29610	■	■	■
BATTERY CHARGE PORT UNIT	29612	■	■	■
CELL MODULE SOLAR	29620	■	■	■
EVSE PACKAGE	29621	■	■	■
INSULATOR	29640	■	■	■
SWITCH - DISCONNECT SERVICE	29701	■	■	■
CABLE POWER CONV TO COMPRESR	29702	■	■	■
CABLE PWR CONV TO LI-ION PAK	29703	■	■	■
CABLE (ON BOARD CHARGER TO DC/DC-J/B)	29707	■	■	■
SW-DISCONNECT SERVICE	29711	■	■	■
BATTERY UPPER COOLING DUCT	29714	■	■	■
BATTERY LOWER COOLING DUCT	29715	■	■	■
BATTERY SIDE COOLING DUCT	29716	■	■	■
BODY SIDE BATTERY CLNG DUCT	29717	■	■	■
BRUSH HOLDER ASSY	30051	■	■	■
TRANSAXLE & MOTOR GENERATOR	31021	■	■	■
OIL PUMP & MOTOR ASSY	31337	■	■	■
MANUAL TRANSMISSION ASSY / REDUCER	32010	■	■	■
REDUCER BREATHER HOSE	32182	■	■	■
DRIVE ASSY-FINAL,REAR	38315	■	■	■
BATTERY FAN INLET DUCT	96712	■	■	■
BATTERY FAN COOLING DUCT INLET	96713	■	■	■
DC/DC CONVERTER INLET DUCT	96733	■	■	■
DC/DC CONVERTER OUTLET DUCT	96734	■	■	■
WATER TUBE ASSY- FLOOR,REAR	21530	■	■	■
WATER HOSE- DRIVE MOTOR,REAR	21531	■	■	■
WATER HOSE-TRACTION MOTOR REAR	21555	■	■	■
WATER HOSE-TRACTION MOTOR CENTER	21556	■	■	■
WATER HOSE-TRACTION MOTOR FRONT	21557	■	■	■
WATER TUBE-TRACTION MOTOR REAR	21558	■	■	■
WATER TUBE-TRACTION MOTOR CENTER	21559	■	■	■
WATER TUBE-TRACTION MOTOR FRONT	21560	■	■	■
Traction Motor Gasket	290H9	■	■	■
TRACTION MOTOR TERMINAL COVER	290T5	■	■	■
TRACTION MOTOR ASSY- WATER INLET	290V5	■	■	■
Traction Motor O-Ring Seal	290V6	■	■	■
POWER HEAD INVERTER SEAL	291A0	■	■	■
Inverter Gusset	291C1	■	■	■
INVERTER COVER	291X2	■	■	■
POWER DELIVERY MODULE	292C0	■	■	■
CABLE ASSY JNTCN TO PWR HEAD	297A0	■	■	■

INFOTAINMENT

CELL PHONE SWITCH	18931	■	■	■
REAR WINDOW ANTENNA AMPLIFIER	25190	■	■	■
RELAY - AUDIO AMPLIFIER	25198	■	■	■
NAVI SPEAKER RELAY	25273	■	■	■
A/V MASTER CONTROL UNIT NS	25914	■	■	■
NAVI GPS ANTENNA ASSEMBLY	25957	■	■	■
ANTENNA-IVCS/GPS	25976	■	■	■
DASH AUX AUDIO JACK	26823	■	■	■
SPEAKER	27933	■	■	■
SPEAKER - WOOFER	27934	■	■	■
AUX AUDIO SYS CABLE	27946	■	■	■
ANTENNA	27960	■	■	■
CONDENSER	27984	■	■	■
RADIO FINISHER	28041	■	■	■
AV/SAT RADIO TUNER ASSY	28050	■	■	■
PRE-AMP SPEAKER AMPLIFIER	28060	■	■	■
REAR AMPLIFIER	28063	■	■	■
POWER SUPPLY BOX	28089	■	■	■
VIDEO OR NAVI DISPLAY ASSEMBLY	28090	■	■	■
FES VIDEO MONITOR	28091	■	■	■
DISPLAY MOTOR ASSY	28092	■	■	■
INTEGRATED DISPLAY ASSY	28094	■	■	■
CABLE-LVDS AUDIO SYSTEM	28096	■	■	■
DVD UNIT	28119	■	■	■
FRONT DOOR TWEETER	28137	■	■	■
REAR DOOR TWEETER	28138	■	■	■
SEAT SPEAKER	28172	■	■	■

INFOTAINMENT CONTINUED				
Vehicle Components Covered	PNC	VSC & Wraps	CPO LW	Cert Sel LW
CD AUTO CHANGER	28184	■	■	■
TELEPHONE ANTENNA SET	28201	■	■	■
SAT ANTENNA ASSY	28208	■	■	■
ANTENNA ROD/MAST	28215	■	■	■
SAT ANTENNA BASE COVER	28228	■	■	■
SAT ANTENNA ADAPTOR	28243	■	■	■
ANTENNA FDR-BLUE TOOTH	28245	■	■	■
SAT ANTENNA ADAPTOR	28247	■	■	■
SWITCH-REMOCON	28267	■	■	■
REMOTE RADIO SWITCH	28268	■	■	■
REAR AUDIO PANEL	28269	■	■	■
ASSY-MICROPHONE	28301	■	■	■
VTR JACK	28318	■	■	■
A-V CONTROL ASSY	28330	■	■	■
DISPLAY CONTROL UNIT ASSY	28332	■	■	■
MICROPHONE UNIT- TELEPHONE	28336	■	■	■
VOICE-ACTIVATED CONTROL MODULE	28337	■	■	■
PHONE ADAPTOR-BLUE TOOTH	28338	■	■	■
TRANSFER ASSY - NAVI	28344	■	■	■
CONTROLLER ASSY - DISPLAY	28346	■	■	■
BONDING(GROUNDING) WIRE	28360	■	■	■
PHONE POWER CONTROL UNIT NS	28384	■	■	■
TV SWITCH ASSY	28395	■	■	■
AV/NAVI SWITCH ASSY	28396	■	■	■
VOLUME/TUNING SWITCHES	28398	■	■	■
IPOD ADAPTER UNIT	28411	■	■	■
AUX AUDIO SYS CONNECTOR	28413	■	■	■
CONNECTOR ASSY USB	28423	■	■	■
HEADPHONE AMPLIFIER	28438	■	■	■
TIMER - AUTO ANTENNA	28490	■	■	■
SOUND BALANCER	29350	■	■	■
CLARION AUDIO/COMBO UNIT	2790A	■	■	■
PANASONIC AUDIO/COMBO UNIT	2790C	■	■	■
BOSE SPEAKER	2793A	■	■	■
CLARION SPEAKER AMPLIFIER	2806C	■	■	■
SPEAKER - WOOFER	2806H	■	■	■
VIDEO CONSOLE	AA017	■	■	■
MOBILE ENTERTAINMENT SYSTEM	AA018	■	■	■
SATELLITE RADIO	AA025	■	■	■
AV TUNER/SAT	AA055	■	■	■

TRANSMISSION CONTINUED				
Vehicle Components Covered	PNC	VSC &Wraps	CPO LW	Cert Sel LW
SENSOR ASSY - SECONDARY SPEED	31930			
VACUUM DIAPHRAGM	31931			
OUPUT SPEED SENSOR	31932			
O-RING SEAL	31933			
REVOLUTION SENSOR	31935			
TURBINE REVOLUTION SENSOR	31936			
TURBINE REVOLUTION SENSOR	31937			
SENSOR ASSY - PRIMARY SPEED	31938			
SOLENOID ASSY CONTROL	31939			
CONTROL SOLENOID ASSY	31940			
DOWNSHIFT SOLENOID	31941			
SOLENOID - LOCKUP	31942			
SHIFT SOLENOID A	31943			
SHIFT SOLENOID B	31944			
SOLENOID - OVERDRIVE CANCEL	31945			
SOLENOID - LINE PRESSURE	31946			
SOLENOID - OVERRUNNING CLUTCH	31947			
SENSOR ASSY-TRANSFER TEMP	31954			
LOW TEMPERATURE SENSOR	31958			
ROD ASSY - PARKING	31970			
SHIFT CONNECTION ROD (CVT)	31978			
SHAFT ASSY - PARKING PAWL	31986			
PARKING PAWL (CVT)	31991			
SWITCH - COMPLETE, ATP	32003			
SWITCH - COMPLETE, NEUTRAL	32004			
SWITCH - REVERSE LAMP	32005			
DOWEL PIN	32006			
NEUTRAL SWITCH	32008			
DIFFERENTIAL LOCK ACTUATOR SWITCH	32009			
TRANSAXLE ASSY-MANUAL	32012			
TRANSAXLE CASE	32100			
DRAIN PLUG	32103			
4WD DRAIN PLUG	32104			
FILLER PLUG	32105			
OIL GUIDE/GUTTER	32107			
OIL GUTTER	32108			
TRANSMISSION MAGNET	32109			
TRANSMISSION FRONT COVER ASSY	32110			
FRONT COVER GASKET	32112			
FRONT COVER OIL SEAL	32113			
CASE COVER	32129			
REAR EXTENSION ASSY	32130			
BREATHER	32131			
REAR EXTENSION OIL GUTTER	32132			
BEARING - EXTENSION, REAR	32133			
REAR EXTENSION OIL SEAL	32136			
ADAPTER PLATE	32137			
BEARING RETAINER	32139			
EXTENSION UPPER COVER	32142			
EXTENSION UPPER COVER GASKET	32143			
BAFFLE PLATE	32150			
REVERSE CHECKING ASSY	32180			
MAIN DRIVE SHAFT GEAR ASSY	32200			
BEARING - PILOT	32202			
MAIN DRIVE BEARING	32203			
SNAP RING	32204			
OUTPUT BEARING	32205			
COUNTER SHAFT	32211			
COUNTER GEAR ASSY	32212			
INPUT SHAFT	32213			
3RD MAIN GEAR	32215			
4TH MAIN GEAR	32218			
BEARING - INPUT SHAFT	32219			
REVERSE COUNTER GEAR	32220			
PILOT BEARING SPACER	32221			
COUNTER SHAFT RR THRUST WASHER	32225			
GEAR - 1ST MAIN	32230			
COUNTERSHAFT NUT	32236			
MAINSHAFT	32241			
MAINSHAFT LOCK NUT	32243			
GEAR - REVERSE MAIN	32245			
REVERSE IDLER THRUST WASHER	32249			
GEAR - 2ND MAIN	32250			
3RD COUNTER GEAR ASSY	32259			
GEAR - 3RD MAIN	32260			
INPUT SHAFT - 3RD GEAR	32261			
GEAR BUSHING	32262			
4TH COUNTER GEAR ASSY	32263			
NEEDLE BEARING	32264			
GEAR - 4TH MAIN	32270			
INPUT SHAFT - 4TH GEAR	32271			
PILOT BEARING	32272			
BEARING - MAINSHAFT	32273			
COUNTER GEAR BUSHING	32275			
COUNTER GEAR NEEDLE BEARING	32276			
REVERSE IDLER GEAR ASSY (CVT)	32280			
REVERSE IDLER SHAFT	32281			
GEAR - REVERSE IDLER	32282			
REVERSE IDLER GEAR BEARING	32283			
RETAINING PIN	32293			
HUB & SLEEVE SET	32300			
GEAR - 5TH INPUT	32310			
COUNTER SHAFT END BEARING	32319			
MAIN SHAFT BEARING	32339			

Vehicle Components Covered	PNC	VSC &Wraps	CPO LW	Cert Sel LW
GEAR - 5TH MAIN	32340			
6TH MAIN GEAR ASSY	32341			
2ND MAIN SHAFT GEAR ASSY	32350			
C RING HOLDER	32351			
SYNCHRONIZER HUB	32600			
SYNCHRONIZER HUB	32601			
SPREAD RING	32602			
SPREAD RING	32603			
BAULK RING	32604			
BAULK RING	32605			
COUPLING SLEEVE	32606			
SHIFTING INSERT	32609			
REVERSE BAULK RING	32617			
SYNCHRONIZER ASSY	32620			
1ST BAULK RING	32680			
2ND BAULK RING	32681			
3RD BAULK RING	32682			
4TH BAULK RING	32683			
5TH BAULK RING	32684			
SYNCHRO RING SET (5TH)	32689			
SPEEDO DRIVE GEAR	32701			
ASSY - SPEEDOMETER PINION	32702			
SPEEDO PINION ASSY	32703			
SPEEDOMETER SLEEVE ASSY	32707			
SPEEDOMETER PINION OIL SEAL	32709			
CHECK BALL & SPRING	32721			
SHIFT CONTROL ASSY	32800			
FORK ROD	32801			
FORK SHAFT BUSHING	32803			
SHIFT FORK	32805			
SHIFT FORK	32806			
FORK ROD	32809			
RING STOPPER	32812			
ROD BRACKET	32813			
INTERLOCK PIN	32815			
INTERLOCK PLUNGER	32817			
SHIFT FORK ASSY (CVT)	32819			
SWITCH PLUNGER	32827			
CHECK BALL	32828			
CHECK BALL AND SPRING	32829			
CHECK BALL AND SPRING	32833			
CHECK BALL PLUG	32834			
CONTROL LEVER ASSY	32840			
CONTROL LEVER	32841			
O-RING	32845			
LOW/HIGH CONTROL LEVER	32847			
PLUNGER	32851			
SELECT CHECK SPRING	32852			
RETURN SPRING PLUG	32854			
RETURN SPRING	32855			
CONTROL ROD SHAFT OIL SEAL	32857			
SEAL - OIL CONTROL	32858			
CONTROL ROD BOOT	32859			
CONTROL LEVER HOUSING ASSY	32868			
CONTROL ROD BRACKET	32881			
SHIFTER CAP	32886			
STRIKING ROD ASSY	32887			
STRIKING ROD	32890			
STRIKING ROD	32892			
STRIKING LEVER	32895			
STRIKING LEVER	32896			
LEVER ASSY - STRIKING	32897			
SLIDE BALL BEARING	32898			
STRIKING ROD PIN	32917			
TRANSFER ASSY	33000			
TRANSFER CONTROL UNIT	33084			
TRANSFER ASSY	33100			
TRANSFER FRONT CASE	33102			
REAR CASE	33103			
CASE ASSY - REAR, TRANSFER	33104			
CASE - CENTER TRANSFER	33105			
CASE - FRONT TRANSFER	33107			
BAFFLE PLATE	33108			
MAIN SHAFT OIL SEAL	33111			
FRONT CASE OIL SEAL	33112			
MAIN GEAR	33113			
DRIVESHAFT OIL SEAL	33114			
RING GEAR	33115			
BEARING - BALL, INPUT	33116			
COVER - FRONT TRANSFER	33117			
END COVER	33119			
COUNTERSHAFT	33120			
COUNTER GEAR	33121			
NEEDLE BEARING	33122			
HYPOID GEAR	33123			
COUNTER GEAR BEARING	33124			
MAIN SHAFT NEEDLE BEARING	33125			
SLEEVE - COUPLING, LOW & HIGH	33130			
SHAFT - MAIN	33131			
LOW SPEED GEAR	33132			
FRONT DRIVE SPOCKET	33134			
FR/RR DRIVE SHAFT BEARING	33135			
BEARING - RADIAL NEEDLE	33136			
BEARING - NEEDLE PILOT	33137			

Vehicle Components Covered	PNC	VSC &Wraps	CPO LW	Cert Sel LW
MAIN SHAFT	33138			
BEARING - BALL, OUTPUT	33139			
REAR CASE OIL SEAL	33142			
PINION SLEEVE	33143			
COUPLING SLEEVE HUB	33144			
SEAL - OIL, REAR CASE	33145			
OIL COVER	33146			
FRONT COVER OIL SEAL	33147			
ADAPTER CASE OIL SEAL	33148			
REAR OIL GUTTER	33149			
TRANSFER FRONT CASE COVER	33150			
SHAFT - FRONT DRIVE	33151			
NEEDLE BEARING	33152			
COUPLING, 2WD & 4WD	33153			
COUPLING SLEEVE	33154			
CHAIN - TRANSFER	33155			
COMPANION FLANGE	33156			
HYPOID PINION	33158			
DRIVE CHAIN	33159			
SHIFT ROD	33161			
SHIFT FORK	33162			
FRONT SHIFT BRACKET	33164			
ROD ASSY - SHIFT	33166			
SHIFT FORK SPRING	33169			
SHIFT SHAFT	33180			
SHIFT SHAFT OIL SEAL	33185			
TRANSFER CONTROL LEVER	33210			
FLANGE ASSY - COMPANION	33211			
CENTER CASE OIL SEAL	33216			
SEAL - OIL, FRONT DRIVE	33217			
REAR COMPANION FLANGE ASSY	33220			
TRANSFER CONTROL DEVICE ASSY	33251			
ACTUATOR ASSY-MOTOR	33252			
ACTUATOR-SHIFT,TRANSMISSION	33253			
PLUG - DRAIN	33312			
CROSS SHAFT	33822			
CONTROL ROD	34103			
FRONT COVER OIL SEAL	34113			
TRUNNION - SELECT ROD	34410			
DUST COVER HOLDER	34504			
DUST COVER	34506			
SUPPORT ROD	34559			
SUPPORT ROD BRACKET	34560			
SUPPORT ROD DAMPER	34582			
ELECTRIC SHIFT SELECTOR	34902			
LEVER - CONTROL	34903			
INDICATOR-SELECT	34910			
ROD COMPLETE - COMPRESSION	34912			
SHAFT ASSY - LEVER	34915			
PIN - POSITION PLATE	34917			
SET - CONTROL LEVER KNOB	34920			
SPRING - RETURN	34926			
ROD - SELECT	34935			
SOLENOID ASSY - SELECT LOCK	34970			
PARK POSITION SWITCH - A/T MODELS	34980			
FINAL GEAR	38101			
FINAL GEAR	38106			
PINION BEARING	38121			
COMPANION FLANGE	38212			
DIFF SIDE SHAFT ASSY	38231			
DIFFERENTIAL SIDE BEARING ASSY	38242			
SIDE RETAINER O-RING SEAL	38343			
BREATHER & HOSE-COUPLING,ELECTRIC	38359			
CASE - DIFFERENTIAL	38410			
GEAR - SIDE	38413			
SIDE GEAR	38414			
PINION MATE	38415			
PINION MATE	38416			
SHAFT - PINION MATE	38417			
PINION MATE SHAFT	38418			
COUNTERSHAFT BEARING	38441			
DIFFERENTIAL SIDE BEARING ASSY	38442			
BEARING - SIDE	38444			
SIDE BEARING	38446			
SHIM-ADJ, SIDE BRG	38453			
4WD FINAL DRIVE ASS'Y	38500			
DIFFERENTIAL CASE	38720			
PINION MATE SHAFT	38727			
VISCOUS COUPLING	38760			
COVER - 4WD REAR	40513			
BUSHING - CLUTCH PEDAL	46526			
CLUTCH PEDAL	46540			
SENSOR ASSY - HI-LOW POS, TRANSFER	86012			
SENSOR ASSY - FLUID TEMP, TRANSFER	86013			
SENSOR ASSY - LOCK POS, TRANSFER	86032			
SENSOR ASSY - ROTARY POS, TRANSFER	86033			
FLANGE - REAR COMPANION	86052			
TRANS DIFFERENTIAL CASE	PHK49			
DIFFERENTIAL CASE ASSY (CVT)	TD65			



ENJOY COMPLETE TRAVEL PROTECTION

Comprehensive Emergency
Roadside Assistance¹,
Alternate Transportation
and Trip Interruption Benefits -
all included for the entire term
of Your Elite plan

¹ Roadside assistance benefits, including towing and Trip Interruption, are not available on all VSC contracts sold in California beginning 4-23-24.



ELITE[®] PROTECTION PROGRAM

TALK TO OUR EXPERTS

to review your protection plan options



- Contact your local INFINITI retailer
- Call 866-840-9614 right now
Mon-Fri 7:00 AM to 8:00 PM CST, Sat 8:00 AM to 4:00 PM CST
- Visit infiniti-elite.com or scan the QR code to schedule a call with an Elite specialist

owners.infinitiusa.com/elite

Disclaimer: This brochure, which is limited in size, is not a contract. Read a sample INFINITI Elite Extended Protection Plan at your Retailer, and read your actual Service Contract as its terms, conditions, exclusions and limitations control.

In Florida, INFINITI Extended Services North America is backed by Nissan Extended Services North America, Inc., P.O. Box 685004, Franklin, TN, 37068-5004. License #60128. Replacement of any part will be made with a new or remanufactured Genuine INFINITI or INFINITI-approved replacement part in use at the time of repair. The replacement part may differ from the original.

Roadside assistance benefits, including towing and Trip Interruption, are not available on all VSC contracts sold in California beginning 4-23-24.

Elite is a registered trademark of Nissan North America, Inc. The INFINITI name, logos and slogans are trademarks owned by or licensed to Nissan Motor Co. Ltd. and / or its North American subsidiaries.
©2024 INFINITI Extended Services North America. All rights reserved. Contact us at 800-662-6200